

How to remove horizontal beams from the liner sleeve?

Before removing the horizontal beams from the pool liner, please make sure the pool is completely empty, and the vertical legs or U-shape side supports have been disassembled and removed from the beams.

During the removal of the legs and U-shape side supports, shake the vertical legs or U-shape side supports from the horizontal beams. This will reduce the tightness between sleeve and beams, therefore the horizontal beams can slide out easier.

1. Pull the sleeve from the holes on the sleeve, and try separated it from the beam. Repeat this along the sleeve. Don't use water or soap as it will cause a suction effect between the sleeve and the beam.



2. Grasp the beam edge and rotate the beam left and right (back and forth) while pulling the beam out. The left and right rotation will help facilitate the removal of the horizontal beam.

